

Change the Status of a Meter Type

To change the status of a meter type, go to the Meter Types Tab on the Settings Page of the Assets Module. Select the three-dot icon to the right of the meter type ID whose status you want to change opening the Meter Types Context Menu.

Settings

Asset Types

Task Templates

Meter Types

Manufacturers

Module Levels

Meter Types

Add Meter Type

Search for Meter Type :

Search

Clear

« < Page 1 of 1 > »

Meter Type ID	Status	Title	Description	Unit (plural)	Decimals	Input Option (Applies to update meter reading only)	
1	...	Active	Time		Minutes	1	Elapsed
2	...	View	Miles		Miles	2	Actual
3	...	Edit	Minutes		mins	1	Both
4	...	Delete	Hours- Elapsed and Actual		Hours	0	Both
		Active					